NEWPORT 400AS

DIGITAL PANEL VOLTMETER

OWNERS MANUAL

NEWPORT

Newport Electronics, Inc., 630 E. Young St.
Santa Ana, California 92705
(714) 540-4914 TWX: 910-595-1787

CHG	E.O. NO	DATES	BY	CHK
A	3979	2/21/84	ER	S

MODEL 400A/S
DIGITAL PANEL METER
OWNERS MANUAL

03111ML-01

TABLE OF CONTENTS

		PAGE
Warranty		iii
1.0	Description	1
1.1	General	1
1.2	Specifications	2
2.0	Receiving and Installation	4
2.1	Unpacking and Inspection	4
2.2	Initial Checkout Procedure	4
2.3	Mechanical Installation	6
3.0	Operating Instructions	6
3.1	Power	6
3.2	Signal Inputs	8
3.3	Input Characteristics	10
3.4	Digital Inputs/Outputs	11
3.5	Pin Assignments	16
4.0	Theory of Operation	18
4.1	General	18
4.2	Timing	18
5.0	Maintenance and Calibration	21
5.1	Introduction	21
5.2	Calibration Adjustments	21
5.3	Maintenance and Repair	23
6.0	Drawings	24
04415	Outline and Mounting	25
04429	Assembly Diagram, Sperry Readout	26
04426AY-01	Assembly Diagram, Analog	27
04422	Schematic Diagram, 4000 Count DPM	28
04423AY-01	Assembly Diagram, Digital	29

WARRANTY

This product of Newport Electronics, Inc. (Newport) is warranted against defective material and workmanship for a period of one (1) year from the date of delivery. Newport will repair or replace all defective equipment returned to it (transportation charges prepaid) during the warranty period without charge provided there is no evidence that the equipment has been mishandled or abused.

If, during the period of this warranty, the product appears to have a defect in materials or workmanship, please call your local Newport representative or write directly to the Customer Service Department, Newport Electronics, Inc., 630 E. Young Street, Santa Ana, California, 92705, and describe the problem.

All products returned to Newport must be insured by sender and must be carefully packaged and adequately protected such as to prevent breakage from shock and rough handling that might occur during shipment; all applicable shipping charges, insurance, duties and taxes must be prepaid by sender.

1.0 DESCRIPTION

1.1 GENERAL

The Newport Series 400A/S digital panel meters are single range instruments designed to digitally indicate a dc input voltage or current. These panel meters provide readings up to ±3999 counts on any of four dc voltage and five dc current ranges. For applications compatible with .025% resolution and .1% basic accuracy the Series 400A/S offers a low-cost reliable approach to digital display of analog voltages and current. Utilizing highly stable integrating techniques they can complete from 4 to 60 full readings per second and on command will hold a reading indefinitely. When the input voltage exceeds full scale, the three least significant digits blank. Zero offset, full scale, and bias current adjustments are available through the rear panel.

The Series 400A/S bipolar instrument has true differential inputs to reduce ground-loop effects. Polarity of the input voltage is automatically selected and displayed as either "+" or "-".

Series 400A/S meters allow the decimal point to be set externally to any one of four positions. The BCD outputs and the external control inputs and outputs are compatible with TTL and DTL for ease in interfacing with other instruments.

The meter consists of two printed-circuit boards enclosed in an aluminum case to minimize the effects of external noise. Both circuit boards can be slid out through the rear of the case once the rear panel is removed. The lower board contains the digital circuitry and the upper board contains the analog circuitry. The two boards are interconnected by a flexible cable.

Outputs and Control Inputs are available on the digital connector at the lower rear of the meter. The Power and the Voltage to be measured are applied to the upper connector. The instrument operates on 115 V or 230 V, 50-60 Hz power.

Other Newport panel instruments including Model 820A Printers may be interconnected to the Series 400A/S without modification or external logic.

1.2 SPECIFICATIONS

	DC VOLTAGE METERS			
Model	400A/S-2	400A/S-3	400A/S-4	400A/S-5
Full Scale	±399.9 mV	±3.999 V	±39.99 V	±399.9 V
Resolution	100 uV	1 mV	10 mV	100 mV
Impedance, Ohms	1 G		10 M	
Input Bias (High Side)	0.2 nA typ; 1 nA max		.1 nA	
Maximum Overdrive	200 V		500 V	
Maximum Error 15-35°C, 30 days	0.1%R+ 0.05%FS	0.1% R+ 0.025%FS	0.15% R +0.05%FS	
Temperature Stability 0 to 15°C and 35 to 50°C	(0.005%FS +0.01%R)/°C	(0.0025%FS +0.01%R)/°C		

	DC CURRENT METERS				
Model	410A/S-2	410A/S-3	410A/S-4	410A/S-5	410A/S-6
Full Scale	±39.99 uA	±399.9 uA	±3.999 mA	±39.99 mA	±399.9 mA
Resolution	10 nA	100 nA	1 uA	10 uA	100 uA
Voltage Drop	400 mV, Full Scale				
Maximum Overdrive	3 mA	10 mA	30 mA	100 mA	500 mA
Maximum Error, 15-35°C, 30 Days	±0.15%R ±0.05%FS				
Temperature Stability 0 to 15°C and 35-50°C	(0.005%FS ±0.01%R)/°C				

Reading Rate — Synchronized to the line, 4/sec to 60/sec programmable by external resistance

Settling Time — After full scale step input, to within one digit, 140 mS standard, from 2 to 1000 mS on special order (See option -F)

Normal Mode Rejection	20 db (60 Hz) with standard filter.
Polarity	Automatic
Common Mode Rejection, dc to 60 Hz	
To Power Line, Case	100 db
To BCD Common	70 db
Common Mode Voltage to Meet CMR Specification	
To Power Line, Case	300 V
To BCD Common	8 V max., either input of a 400 mV or 4 V meter or either lead on the output of the input attenuator of a 40 V or 400 V meter.
Remote Controls	Hold, BCD Enable, and Display Blanking.
Calibration	Full scale, zero, and bias current adjustments accessible from rear panel.
Operating Temperature Range	0 to 55°C
Storage Temperature Range	-40 to +80°C
Display	0.55 inch, 7-segment, planar, gas discharge numerals with "+" and "-" indicators. Overload blanks three least significant digits.
Power	115 V ac or 230 V ac ±10%, 50/60 Hz, 6 W max.
Enclosure	2.2" high x 4.35" wide x 4.5" deep extruded aluminum case and bezel (option A3). Removable name plates for replacement by customer nomenclature.
Weight	Less than 3 lb. net; 5 lb. shipping.
Analog (top) Connector	Keyed between pins 13 and 14.
Digital (lower) Connector	Keyed between pins 3 and 4.
Manufacturers Type:	SAE SAC15D/1-2 Viking 2VH15/1AN5 Cinch 251-15-30-160
Connector Key	
Manufacturers Type:	SAE 007900 Viking 091-0024-000 Cinch 456-99-99-193

2.0 RECEIVING AND INSTALLATION

2.1 UNPACKING AND INSPECTION

Your Series 400A/S digital panel meter has been carefully inspected and tested before shipment. Unpack the meter and perform a visual inspection to assure that no damage has occurred during shipment or handling. These meters are factory sealed units. The only controls that may require periodic adjustment are accessible through the rear panel. Because extensive damage could result from attempts to measure circuit parameters or to trouble-shoot the meter by non-factory personnel, the warranty is voided if the unit has been removed from its case and shows signs of unauthorized repairs.

2.2 INITIAL CHECKOUT PROCEDURE

1. Connect a voltage source (e.g. power supply) between pins 1 and 2 on the upper (Analog) connector.

2. Connect a jumper between pins 1 and 6 on the same connector.

3. Connect a power cord to the upper (Analog) connector as follows:

   A. To pins 15 and S, connect the high or "hot" lead.

   B. To pins 14 and R, connect the low or "cold" lead.

   C. To pins 13 and P, connect the earth ground or "third wire".

4. Connect a jumper between pins 12 and 14 on the lower (Digital) connector.

5. Apply 115 V ac, ±10%, 50-60 Hz to the power cord.

6. Adjust the input voltage source to be within the measurement range of the meter and verify that the meter is reading correctly.

CAUTION

Accidental connection of power to the Digital Board may result in catastrophic failure.

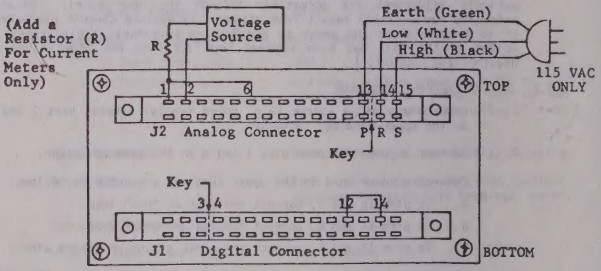

Rear View
Figure 1

2.3 MECHANICAL INSTALLATION

The drawing 944.5 illustrates the detailed method of mounting the panel meters for each of the three mounting options. All critical dimensions are shown including those for the panel cutout.

MOUNTING STYLE	DESCRIPTION
A1	Unit is mounted flush on studs behind a rack panel.
A2	Unit is mounted behind a rack panel by inserting the furnished 6-32 screws through the rack panel and into threaded holes in the case.
A3	Unit is mounted through the rack panel from the back and held in place from the rear by a "U" bracket. The mounting cutout is hidden by the instrument bezel.

3.0 OPERATING INSTRUCTIONS

3.1 POWER

3.1.1 Description

The standard meter operates from a 115 V or 230 V, ±10%, 50-60 Hz power source. It dissipates approximately 6 watts. It should be connected to the power source by a three-conductor cable. Two conductors provide the power to the meter and the third provides safety grounding of the case. The third conductor should connect to earth ground at the power end of the cable and to the Analog connector at the meter end of the cable. A wire from the Analog terminal to a mounting terminal lug completes the connection to the case when the lug is secured by the rear panel screw.

CAUTION

Accidental connection of power to the Digital board may result in catastrophic failure.

3.1.2 Wiring Detail, 115 V ac Operation

The power cable is connected as follows to the top or Analog Board.

A. To pins 15 and S, connect the high or "hot" side of the 115 V power line.

B. To pins 14 and R, connect the low or "cold" side of the 115 V power line.

C. To pins 13 and P, connect the earth ground or "third wire".

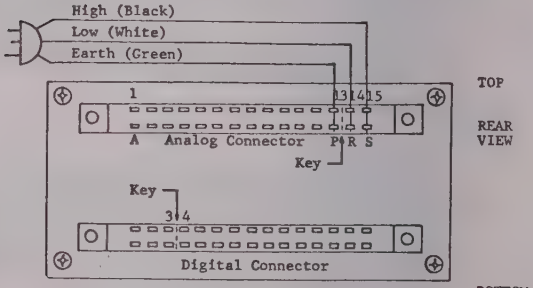

115 V ac Connection

Figure 2

3.1.3 Wiring Detail, 230 V ac Operation

The power cable is connected as follows to the top or Analog Board.

A. To pin 15, connect the high or "hot" side of the 230 V power line.

B. To pin 14, connect the low or "cold" side of the 230 V power line.

C. Jumper pin R to pin S.

D. To pins 13 and P, connect the earth ground or "third wire".

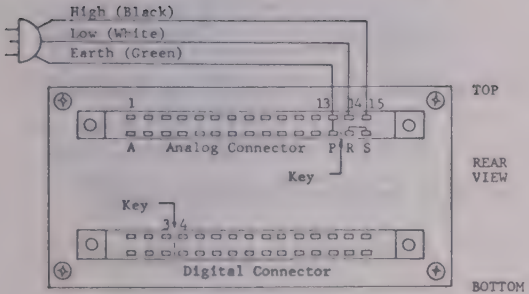

230 V ac Connection

Figure 3

3.2 SIGNAL INPUTS

3.2.1 Introduction

[illegible] ground.

[illegible] megohms.

[illegible] ground. The latter constitutes the reference ground for the [illegible] ±300 V.

3.2.3 Wiring Detail - Grounded Input

If the signal to be measured is referenced to the meter ground, it will be considered to be a Grounded Input. The Common Mode Voltage between either lead of the input amplifier and meter ground (if present) should be no more than 8 volts.

For best results the input signal to the meter should be connected to the top (Analog) board by a twisted shielded cable.

A. To pin 2, connect the high side of the input signal.

B. To pin 1, connect the low side of the input signal.

C. Connect the shield to low side of the input signal. Leave the opposite end of the shield unterminated.

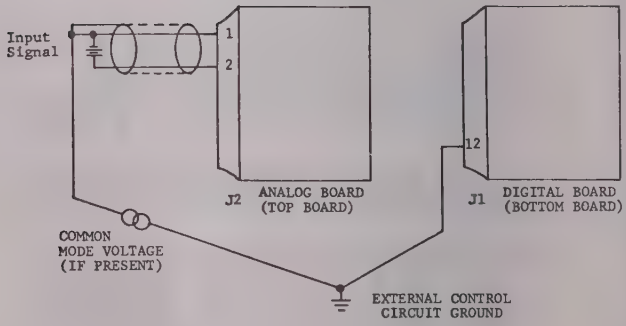

Input Signal Connections - Bipolar Input - Input Grounded

Figure 4

3.2.4 Wiring Detail - Floating Input

When the input voltage source is completely floating from meter ground (eg. a battery), the common mode voltage will exceed the 5 V limitation due to the lack of a low impedance path for the input bias current between the input leads and circuit ground. The effect is for the readings to wander erratically. To reduce the common mode voltage to less than 5 V, pin 1 should be returned to circuit ground pin 6, through the internal network on pin 3.

A. To pin 2 connect a high side of the input signal.

B. To pin 1, connect the low side of the input signal.

C. To pin 3, (Guard), connect the meter end of the shield. Connect the other end of the shield to the low side of the source.

D. If the meter is used for visual readout only (eg. no external control) connect a jumper from pin 3 to pin 6.

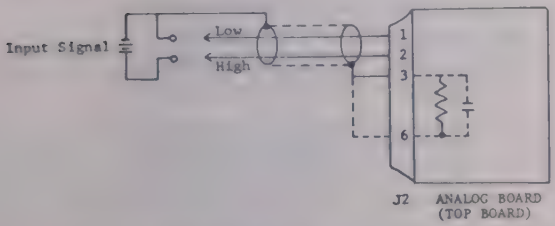

Input Signal Connections - Bipolar Input - Input Floating

Figure 5

3.3 INPUT CHARACTERISTICS

3.3.1 Input Source Resistance - Bipolar Model 400A/S

Maximum bias current for 400A/S meters is 4 nA. One count of offset will be generated by input source resistances of 1 and 1 M when respectively. The error due to source resistance may be minimized with the offset bias current control of the meter.

3.3.2 Input Filter

The standard input filter is a single section low pass filter having a cutoff frequency (-3 dB) of 6 Hz. The settling time to .1% is 240 ms.

The filter cutoff frequency may be factory altered by changing the value of a capacitor to provide either a shorter settling time for faster response or a lower cutoff frequency for better noise rejection.

Since the filter is connected directly to the input, any equivalent source impedance will act to lower the cutoff frequncy and increase the noise rejection and settling time. By putting resistance in series with the high input, input filter characteristics may be easily changed.

3.4 DIGITAL INPUTS/OUTPUTS

The logic levels present at the digital connector are DTL and T2L compatible.

A. Input Requirements:

Low level 0 to +.5 V, sink 1.6 mA

High level +2.0 to +5.5 V, source .1 mA

B. Output Specifications:

Low level 0 to +.5, sink 5 mA

High level +2.4 to +5.5 V, source 6 k ohm

3.4.1 External Control

The digital panel meter provides a choice of several external control modes. This choice of modes allows the meter to satisfy a wide variety of interface requirements when used as a systems component.

The meter has a basic read rate of 4 conversions per second, but is capable of making measurements at a maximum rate of 60 conversions per second when the 60 Hz read rate input is grounded. Each conversion is synchronized to the 60 Hz power line and always starts at the same point on the power line cycle. By means of external control any number of these cycles may be skipped with the meter retaining the reading corresponding to the last conversion. When the external command is given for a new reading the meter waits until the next synchronization point is reached on the power line cycle before starting the conversion.

The basic external control functions are labeled Hold and Data Ready. After the Hold signal goes false (low) the meter starts a new conversion process at the next synchronization point on the cycle. At the conclusion of the conversion process and before the next synchronization point occurs, the Data Ready signal goes true (high). This indicates that the conversion process is complete and the information present on the data outputs is ready to use. A test input is provided which, when connected to digital ground, causes the display indicator to light all segments.

3.4.2 HOLD

The Hold input controls the start of each conversion process. A low level enables and a high level (or open) disables the conversion process.

[illegible] pulses are more readily to occur after the Hold input goes high. When this is undesirable or [illegible] the inputs board may be used to [illegible] the storage feature.

3.4.2.1 Operation With Storage - The meter is normally furnished with storage. The application of a low Hold input sets the storage element which then remains set after the Hold input goes high. The storage element is reset by the start of the next conversion cycle. The effect is to provide one more measurement after the Hold input goes high. The following three modes of operation exist with the storage option:

A. Level Mode - While the Hold input is maintained false (low), measurements occur at the selected reading rate. While it is true (high), the last measurement made is after the hold input goes high. It is this measurement that is held in memory as long as the Hold input remains true.

B. Pulse Mode - A pulse that goes low at the Hold input for a minimum of two microseconds and terminates before the next synchronization point on the power line cycle will set the storage element and initiate a conversion cycle starting at the next synchronization point. If the pulse extends beyond the synchronization point, an additional conversion will occur. To insure that only one conversion is made, the pulse width must be less than 300 microseconds.

C. [illegible] connected to the Hold input as shown.

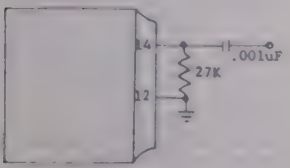

[illegible]

A negative-going transition of the Hold signal will set the storage element and provide one conversion starting at the next synchronization point. The amplitude of the transition must be 3 to 5 volts with a fall time of less than 1 microsecond. The Hold signal must be low for 1 uS minimum and high for 100 uS minimum.

3.4.2.2 Operation Without Storage - There are applications (eg. when the BCD outputs are connected to a printer) for which it is desirable to disable the storage function. This is accomplished by cutting or removing jumper W11 on the digital board. This insures that when the Hold input goes high, no more conversions take place and the BCD outputs remain static for use by an external device.

3.4.2.3 Wiring Detail - The Hold input signal is connected to the bottom (Digital) board.

A. To pin 14, connect the high side of the input.

B. To pin 12, connect the low side or ground return of the Hold input.

3.4.3 Data Ready

Two modes of operation exist for the Data Ready output signal, the Conventional Mode, and the Reset Mode. The Conventional Mode is operational when the meter is shipped. The Reset Mode requires that the storage circuit be operational and that the two control lines labeled Ready and Data Ready Enable be shorted together.

3.4.3.1 Conventional Mode - The Data Ready signal goes true (high) to indicate the completion of a conversion process and remains true until the next conversion process is started. During this time the BCD outputs represent the value of the measurement and are available for use by an external device. The Data Ready signal normally remains true for at least 6 milliseconds but this time may be extended indefinitely with a high level on the Hold input.

3.4.3.2 Reset Mode - With the Data Ready Enable input connected to the Ready output, the Data Ready signal goes true to indicate the completion of the conversion process AND the reset condition of the storage element. The Data Ready signal goes false to indicate the EITHER the conversion is in progress OR the Hold signal has been made false (low) to set the storage element since the last conversion started. This mode is useful when interfacing with an external device that requires the Data Ready signal to go false immediately when the Hold input goes false.

3.4.3.3 Wiring Detail - The Data Ready, Ready, and Data Ready Enable connections are available on the bottom (Digital) board.

A. Pin 1 - Data Ready output signal.

B. Pin 12 - Ground reference for the Data Ready output signal.

C. Connect pin 3 (Data Ready Enable) to pin 13 (Ready) only if the Reset Mode of operation described above is desired.

3.4.4 Decimal Points

Each of the four digits of the decimal readout has a left-hand decimal point which may be lighted to provide the proper decimal point representation of the quantity being measured. All four decimal points are available at the connector and may be individually selected by external circuitry.

3.4.4.1 Wiring Data - The decimal point locations are designated by representing the four full decimal digits by X's and placing the decimal point in the position corresponding to its display location. The decimal point connections are available on the bottom (Digital) board.

A. Pin 7 - Decimal Point XXX.X

B. Pin 8 - Decimal Point XX.XX

C. Pin 9 - Decimal Point X.XXX

D. Pin 10 - Decimal Point .XXXX

E. Pin 12 - Ground Reference

Any decimal point may be lighted by connecting the designated pin to ground, pin 12, either with a jumper or through relay contacts. A solid state switch could also be used if it is rated for 3 mA in the ON state and is capable of blocking 15 volts with a leakage of less than 1 microampere in the OFF state.

3.4.5 BCD Outputs

Four 1-2-4-8 true BCD outputs representing each digit of the readout as well as over-run and polarity, are standard. The over-load output goes true when the input voltage exceeds the full scale rating of the meter. The polarity output goes true when the polarity of the input signal is positive.

The BCD, polarity and overload outputs are settled and ready for acceptance by an external device when the data ready signal goes true. The data may be held indefinitely by maintaining a true level at the Hold input.

The BCD outputs of the Series 400A/5 are buffered and gated. Connecting a low signal to BCD Enable pin 5 causes all the BCD outputs to go high. The gated BCD lines from several meters may be multiplexed by paralleling the outputs of sequentially enabling each meter. The BCD outputs will appear on the common bus.

3.4.5.1 Wiring Detail - The data outputs (5 pins at the lower right of the bottom connector. The pin designations are listed on the pins and power input. Any of the pins, pin 14, should be used as the common reference for these signals.

3.4.6 Blanking

To blank the display connect a high signal (+2.4 to +5.5, source 1 mA) to blanking pin 15 on the bottom (Digital) board. This will cause the display to extinguish.

3.4.6.1 Wiring Detail

A. To Pin 15, connect the signal (+2.4 to +5.5, 1 mA).

B. To pin 12, connect the signal ground reference.

3.4.7 Conversion Rate

When shipped, the meter will make readings at a rate of 4/sec. To increase this rate to 60/sec. the 60 Hz Read Rate input must be grounded. By connecting a resistor between the 60 Hz Read Rate input and ground, conversion rates between 4/sec. and 60/sec. may be selected. See chart below for approximate values.

3.4.7.1 Wiring Detail - Connect a jumper or fixed resistor with short leads between pin 6 and pin 12 to obtain read rates above 4/sec.

Conversion Rate	Resistance
60/sec	Short
30/sec	220 k
15/sec	820 k
8/sec	2.2 Meg
4/sec	Open

3.4.8 Test

Connect a jumper between pin 11 and pin 12 of P1 to light all segments of the readout.

3.5 PIN ASSIGNMENTS

DIGITAL CONNECTOR (LOWER) P1

FUNCTION		PIN NO.
BCD Output:	1 bit	A
	2	B
	4	C
	8	D
	10	E
	20	F
	40	H
	80	J
	100	K
	200	L
	400	M
	800	N
	1000	P
	2000	S
Overload (4 k)		4
Pos. Polarity		R
Circuit Gnd (Digital)		12
Hold		14
Data Ready		1
Dec. Pt. at:	XXX.X	7
	XX.XX	8
	X.XXX	9
	.XXXX	10
60 Hz Read Rate		6
Ready		13
Data Ready Enable		3
Blanking		15
[illegible]		[illegible]
BCD Enable		5
Internal Connector		2

ANALOG CONNECTOR (UPPER) P2

FUNCTION		PIN NO.
Input:	Low	1
	High	2
Guard		3
Circuit Gnd (Analog)		6
Power:		
	Earth Gnd	13 & P
115 V	Lo	14 & R
60 Hz	High	15 & S
	Earth Gnd	13 & P
230 V	Lo	14
60 Hz	High	15
	Jumper	R & S

NOTE: To enable continuous reading connect pin 14 to pin 12 on the digital connector.

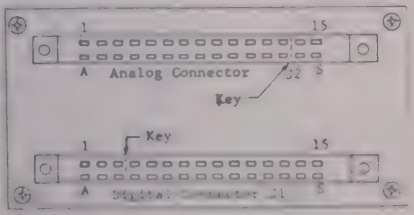

4.0 THEORY OF OPERATION

4.1 GENERAL

The Series 400A/S digital panel meters basically accept dc analog voltages at their input and display the value digitally with cold-cathode glow tubes. The value is also available electrically in BCD form at the digital connector. The inputs to the 400 mV and 4 V full scale meters are connected directly to the input amplifier. The 40 V and 400 V full scale meters are basic 4 V meters with a 10:1 and 100:1 attenuator respectively. The current meters are basic 400 mV full scale meters with a shunt dropping resistor across the input.

4.2 TIMING

The conversion process is synchronized to the 60 Hz power line as shown in the timing diagram below. Conversion takes place during the negative portion of the cycle. During the positive half cycle the reading is held and the half-wave rectified high voltage is applied to the display tubes.

The reference current is integrated for a period of time proportional to the reading. It is zero for a reading of zero, 6 ms for a reading of full scale and greater than 6 ms for an overload input.

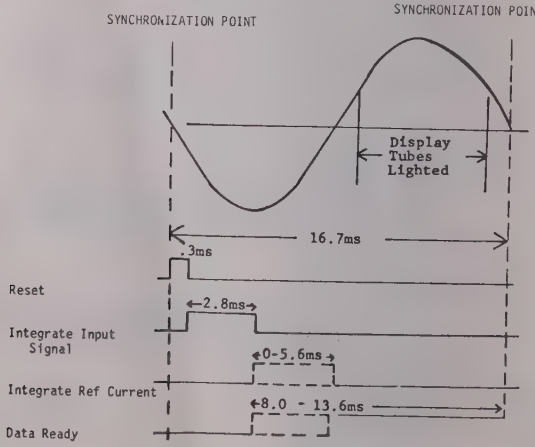

Simplified Timing Diagram

Figure 8

Refer to the Simplified Block Diagram (figure 9) and Basic Timing Diagram (figure 8).

The measurement cycle begins when the reset circuit detects the zero crossing of the falling edge of the ac line and generates a reset pulse. This reset pulse sets the BCD counter to a count of 0000 and sets the I-Sw flip flop, U5, to the Signal Integrate state. The I-Sw flip flop output causes the current switch to switch the signal current sink to the integrating capacitor and turns the gated oscillator on. When the integrating capacitor begins to charge down, the clamping comparator output goes high.

After 4000 counts the BCD counter overflows, the I-Sw flip flop is set to the Reference Integrate state, causing the current switch to select the reference current source. At this time the BCD counter is at 0000 counts. The integrating capacitor discharges at a constant rate back to its initial charge at which time the clamp/0 comparator goes low, turning the gated oscillator off. The number of counts now in the BCD counter is equal to the input voltage and the data ready signal goes true. The D.S. lamp is turned on each half cycle during the time data is stable.

FIGURE 4-2 SIMPLIFIED BLOCK DIAGRAM

Simplified Block Diagram
Figure 9

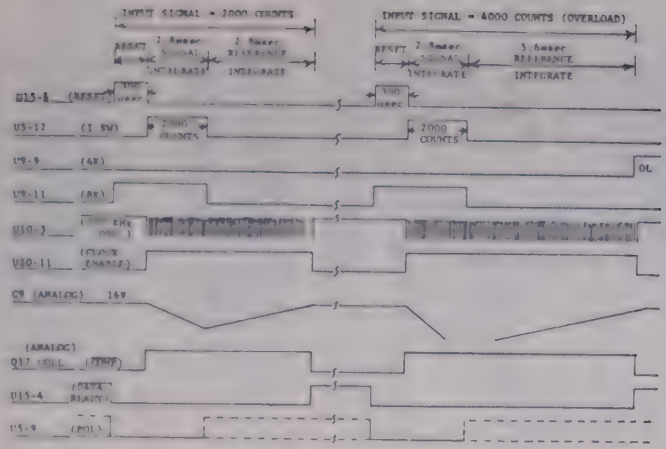

TIMING DIAGRAM 400A/S FIGURE 4-3.

5.0 MAINTENANCE AND CALIBRATION

5.1 INTRODUCTION

There are two standard adjustments available on the basic digital panel meter. These are the Zero or Balance adjustment and the Full Scale adjustment. These controls are located at the rear of the meter.

All controls should be adjusted with an insulated screwdriver according to the following instructions. Always allow at least 30 minutes warm-up time before making the adjustments.

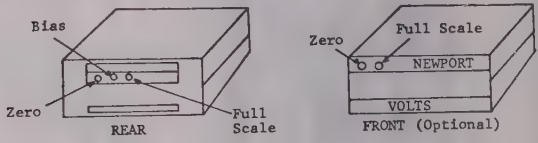

Figure 11

5.2 CALIBRATION ADJUSTMENTS (For set-up see Inital Checkout Procedure)

5.2.1 Zero (Balance)

This control is located at the rear of the meter in the upper left-hand corner. It adjusts the zero offset of the input amplifier which affects balance between the plus and minus ranges of the bipolar meter.

With the input signal leads shorted and a negative reading on the meter, slowly rotate the zero adjustment in the positive direction. Stop at the instant the polarity indicator switches from minus to plus.

To check the adjustment, apply an input signal equivalent to 10 counts. If the zero adjustment is correct, the meter will display the same reading (except for polarity indication) when the signal polarity is reversed.

5.2.2 Full Scale

This control is located at the rear of the meter in the upper middle of the back panel. It adjusts the full scale reading of the meter. For best results this adjustment should be made with an accurately known input set between 1/2 and 3/4 of full scale. It is most accurately set by applying to the input a voltage known to .01% which has a value half way between two consecutive readings on the meter. The control is then adjusted until the reading bounces between these values.

This adjustment should not be attempted until the previous zero adjustment has been performed.

5.2.3 Input Bias

This control is located at the rear of the meter and normally needs no adjustment. It adjusts the amount of offset current coming out the high input lead. To set this current first short the input leads to make sure the meter is zeroed, then place a 1 meg resistor in series with the high lead. By adjusting the bias control this reading can be adjusted to zero.

5.3 MAINTENANCE AND REPAIR

Due to the complex operation of this instrument and special laboratory test equipment needed to repair it, no attempt should be made to trouble-shoot the circuit cards in the field by untrained personnel.

Before returning the instrument to the factory, every attempt should be made to insure that the instrument is actually at fault and that the trouble is not in the set up. The best way to insure this is by substituting a known working instrument. Alternately, the meter should be removed from the set up and tested by using a battery or power supply as an input source.

If the instrument is found to be at fault, please fill out the returned Material Authorization and return with the unit. The best way to insure that the patient will be quickly found and repaired is to include a layman of your actual test conditions, so that the factory will be able to duplicate the failure easily.

If customer repair is to be undertaken, the following guide will assist in the tracing of a fault to a functional area of the meter.

A. Test 1

After determining that the power supplies are functioning (the correct voltages), warm up the meter per the zeroing checkout procedure in the front of this manual. Apply a positive and then a negative 10 volt DC input signal. If the + and - indications do not follow the input signal, look at the inputs over at the front panel. If the signal does not appear at the polarity of the input signal, the trouble is there, in the input amplifier circuitry on the analog board.

B. Test 2

If the signal at J5 pin 7 (digital) is correct, ground J10 pin 9 (analog). The readout should be blank.

C. Test 3

Remove the ground from J10 pin 9 (analog) and ground J5 pin 11. The readout should be 1111 (overranging). If this test or test 2 produces incorrect results the trouble is on the digital board.

Using the results of these tests, the simplified block diagram, figure 8, will assist in tracing the malfunction to a functional block of the meter.

Test 1 indicates if the input amplifier is following the input signal polarity. Test 2 simulates a comparator input to the digital circuitry as if the analog board was working with zero input. Test 3 simulates no comparator input to the digital circuitry as if the analog board was working with an overloaded input. If all three tests give correct results, look for the trouble in the reference current source or the current switch circuits. Use a scope to look at the top of C9 (analog) using a 20 M ohm probe with a full scale input signal. A waveform should be observed ramping from approximately +15 V to a point several volts lower during the time the signal at U5 pin 12 (digital) is at a positive level (Signal Integration Time) and then ramping back up when the signal at U5 pin 12 is at a lower level (Reference Integration Time).

6.0 DRAWINGS

[illegible]	Cabling and Mounting
[illegible]	Assembly Drawing, Supply Breakout
[illegible]	Assembly Drawing, Audio
[illegible]	Schematic Diagram, Audio Input PWA
[illegible]	Assembly Drawing, Digital

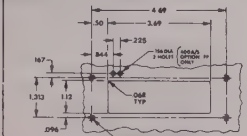

RECOMMENDED PANEL CUTOUT

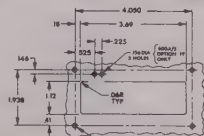

RECOMMENDED PANEL CUTOUT



RECOMMENDED PANEL CUTOUT

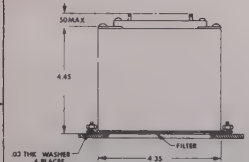

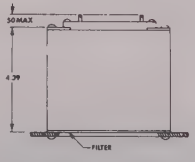

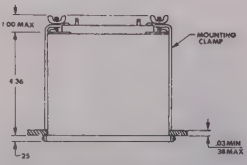

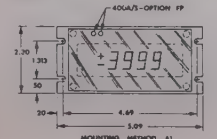

MOUNTING METHOD A1

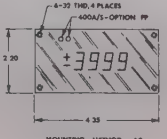

MOUNTING METHOD A2

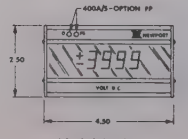

MOUNTING METHOD A3

1 REFERENCE OWNER'S MANUAL 03111.
NOTE UNLESS OTHERWISE SPECIFIED

BY	DATE
BR B. Brandon	8-15-79
CHK'D	8-15-79
APPD	8-15-79

USE OF THIS PROPRIETARY DATA IS SUBJECT TO THE TERMS AND CONDITIONS OF OMS PRODUCTS

NEWPORT LABORATORIES INC
630 E. YOUNG ST. SANTA ANA, CALIF. 92705

TITLE: OUTLINE & MOUNTING
A1, A2 & A3 MODEL 400A/S

CODE IDENT	SIZE	DWG
32873	D	04415

SCALE NONE | MODEL 400A/S-FP | SHEET 1 OF 1

04415

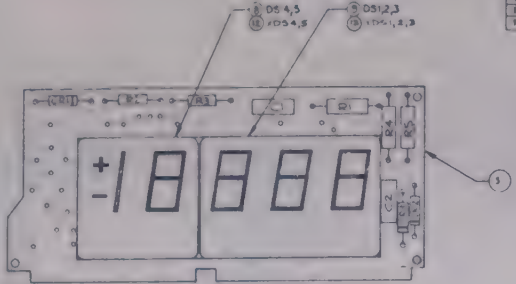

CHG NO	DATES	BY	CHK

0 FOR MODELS SEE USED ON BLOCK.

4. REFERENCE TEST SPECIFICATION NO. 06418
3. REFERENCE SCHEMATIC DIAGRAM NO 06422 (.400A/S), 03907 (.2000B S).
2. REFERENCE PARTS LIST NO 04610-0, 04630-02 ICE 2605
1. ASSEMBLY PER WORKMANSHIP MANUAL 02281-01

NOTE UNLESS OTHERWISE SPECIFIED.

MODELS USED ON

UNLESS OTHERWISE SPECIFIED

TOLERANCES
X ± 08 ANGULAR
.XX ± 01 ± 0.30
.XXX ± 010
THREADS (CLASS 2A-2B)
BREAK ALL BURRS AND SHARP EDGES 02 MAX
DO NOT SCALE DWG
MATERIAL

	BY	DATE
DR		
CHK		
APPD		

FINISH

NEWPORT LABORATORIES, INC
630 E YOUNG ST. SANTA ANA, CALIF. 92705

TITLE
Assembly Diagram
Sperry Readout

CODE IDENT	SIZE	NO
32873	B	04429

SCALE 2/1 MODEL 6 SHEET 1 OF 1

CHG	E.O. NO.	DATES	BY	CHK
A	RELEASE	4/29/83	SK	
B	3817	9/9/83	SK	

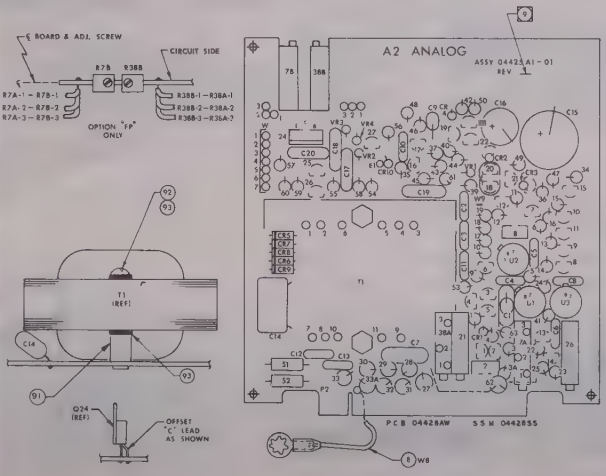

9 PERMANENTLY MARK CURRENT REV.
8 REFERENCE OPTION "FP" PARTS LIST NO. 04433-01-02-03.
7 REFERENCE NEXT ASSEMBLY NO. 04434-01 THRU -04.
6 CODED END OF DIODE DENOTES CATHODE.
5 RUBBER STAMP SERIAL NO. AND APPROPRIATE PART & DASH NO'S.
4 TEST PER SPECIFICATION NO. 04418
3 REFERENCE SCHEMATIC NO 04427SC-01
2 REFERENCE PARTS LIST NO. 04425A1-01.
1. ASSEMBLE PER WORKMANSHIP MANUAL 02281-01.
NOTE UNLESS OTHERWISE SPECIFIED

UNLESS OTHERWISE SPECIFIED
TOLERANCES
ANGULAR
BY
DATE
APPD
NEWPORT LABORATORIES, INC
630 E YOUNG ST SANTA ANA, CALIF. 92705
TITLE
PCBAD, 400X, ANALOG
CODE IDENT
32873
SIZE
C
DWG NO
04426AY-01
SCALE 2/1
MODEL 400A/S
SHEET 1 OF 1

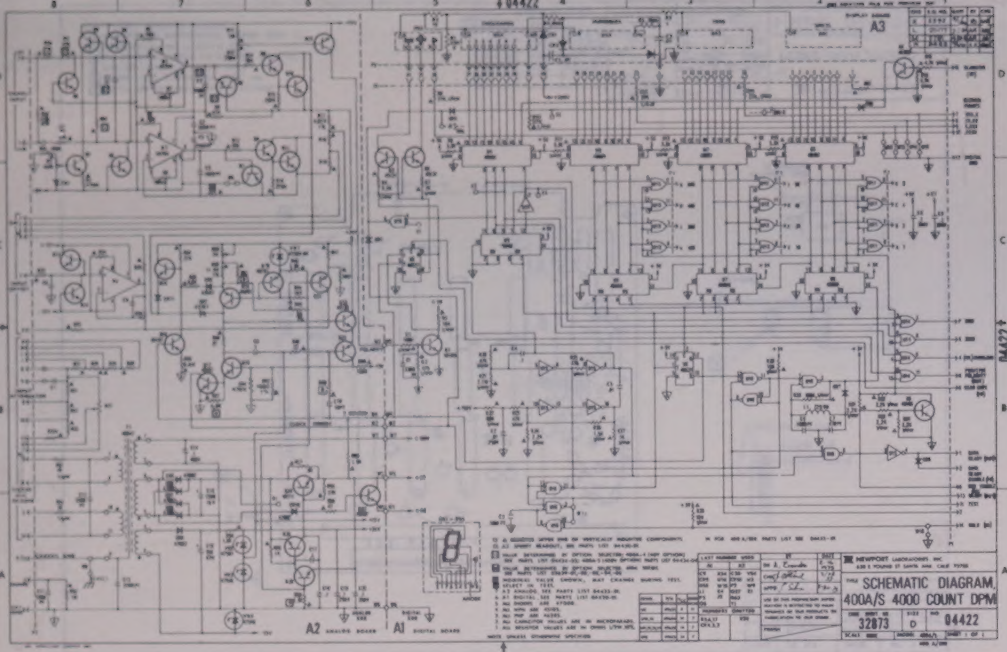
04422
A3
A2
A1
SCHEMATIC DIAGRAM,
400A/S 4000 COUNT DPM
NEWPORT LABORATORIES, INC.
32073
D
04422

CHG	E.O. NO.	DATES	BY	CHK
A	RELEASE	3/8/83	RS	
B	9816	9/10/86	S.K.	RMG

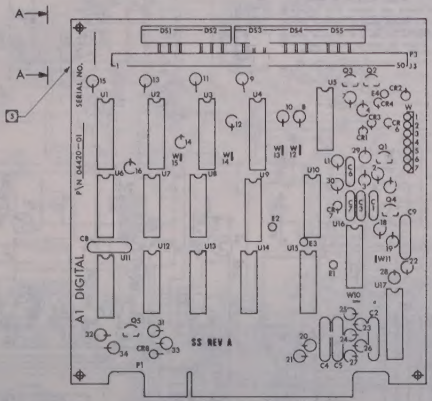







6 CODED END OF DIODE DENOTE CATHODE.
5 RUBBER STAMP APPROPRIATE SERIAL NO.
4 TEST PER SPECIFICATION NO. 0441B.
3 SEE TABULATION BLOCK FOR P/L AND SCHEMATIC.
2 MODIFICATION OF C4, 400P/S ONLY.
1 ASSEMBLE PER WORKMANSHIP MANUAL 02281-01.
NOTE: UNLESS OTHERWISE SPECIFIED.

	400P/SER	04442	04510-01
	400A/SER	04422	04435-01
	400P/S	04442	04420-02
	400A/S	04422	04420-01
3	MODEL	SCHEM	P/L

TABULATION BLOCK

UNLESS SPECIFIED DIM TOLERANCES ARE
RELEASE TOL: X ± .3, .XX ± .25
MACHINED: .XX ± .05, .XXX ± .010
ANGLES: ± 0° 30'
DO NOT SCALE PRINT

USED ON: 400 A/S, 400 P/S

APPROVALS	DATE
DESIGN	10/7/83
SUPERVISOR	11/7/83
QMC	
QMO	11/7/83

USE OF THIS PROPRIETARY INFORMATION IS RESTRICTED TO MAINTENANCE OF OUR PRODUCTS OR FABRICATION TO OUR ORDER.

NEWPORT ELECTRONICS INC. 631 EAST KONALSTREET, SANTA ANA, CA. 92705-5878

TITLE: PCBAD, 400X, DIGITAL

SIZE	CODE IDENT NO.	DRAWING NO.
C	32873	04423AY-01

SCALE 2:1 MODEL 400X SHEET OF

Newport Electronics, Inc.
630 E. Young Street
Santa Ana, CA 92705
Phone: (714) 540-4914
TWX: 910-595-1787
(NEWPORT LABS)

Newport Electronics B.V.
P.O. Box 105
2150 AC Nieuw-Vennep
The Netherlands
Phone: (025) 2687381
Telex: 71287
(NEWPT NL)

Newport Electronics GmbH
7261 Deckenpfronn
Gau-Strasse 28-30
German Federal Republic
Phone: (7056) 3017
Telex: 726157
(NEWPT D)

Newport Electronics Ltd.
Red Fira Building
Maxwell Road
Stevenage Herts
England SG1 2EW
Phone: (0438) 65671
Telex: 826454
(NEWPEL G)

Newport Electronics S.A.R.L.
9 rue Denis Papin
78190 Trappes
France

www.manualsplus.com
1024565